

SERVICE & OPERATING MANUAL

ORIGINAL INSTRUCTIONS



2" Plastic Valor


Valor Plastic Pumps

- Polypropylene
- PVDF
- Conductive Polypropylene



intertek
Total Quality Assured.

ISO 9001 Certified
ISO 14001 Certified

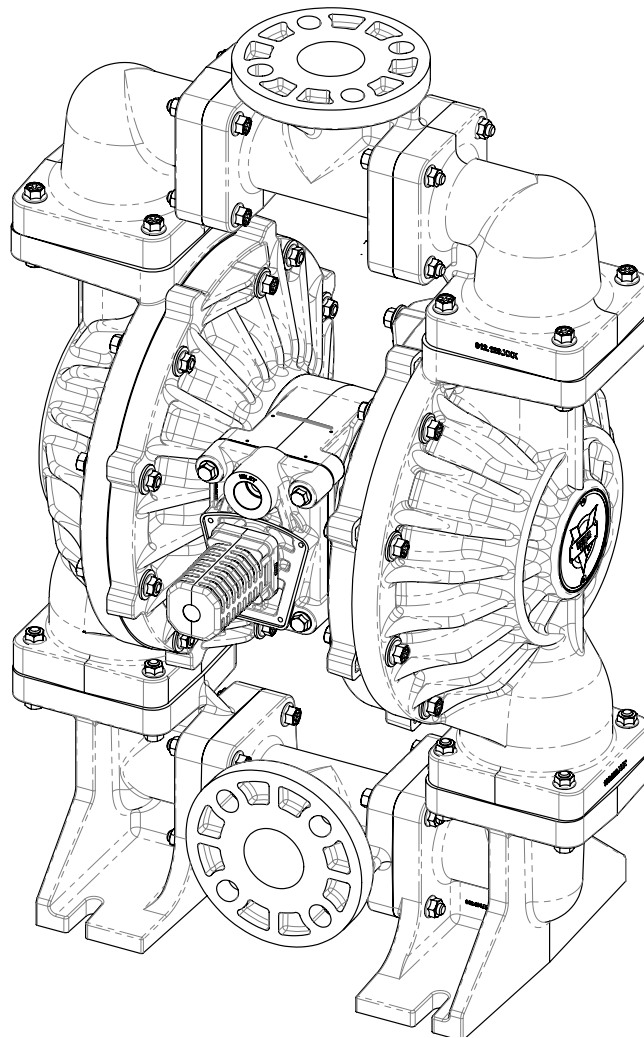

VERSAMATIC®

Safety Information

! IMPORTANT



Read the safety warnings and instructions in this manual before pump installation and start-up. Failure to comply with the recommendations stated in this manual could damage the pump and void factory warranty.



When the pump is used for materials that tend to settle out or solidify, the pump should be flushed after each use to prevent damage. In freezing temperatures the pump should be completely drained between uses.

! CAUTION



Before pump operation, inspect all fasteners for loosening caused by gasket creep. Retighten loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



Plastic pumps and plastic components are not UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.



WARNING

Pump not designed, tested or certified to be powered by compressed natural gas. Powering the pump with natural gas will void the warranty.



WARNING

The use of non-OEM replacement parts will void (or negate) agency certifications, including CE, ATEX, CSA, 3A and EC1935 compliance (Food Contact Materials). Warren Rupp, Inc. cannot ensure nor warrant non-OEM parts to meet the stringent requirements of the certifying agencies.

! WARNING



When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. Be certain that approved eye protection and protective clothing are worn at all times. Failure to follow these recommendations may result in serious injury or death.



Airborne particles and loud noise hazards. Wear eye and ear protection.



In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe containment.



Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers and other miscellaneous equipment must be properly grounded.



This pump is pressurized internally with air pressure during operation. Make certain that all fasteners and piping connections are in good condition and are reinstalled properly during reassembly.



Use safe practices when lifting

ATEX Pumps - Conditions For Safe Use

1. Ambient temperature range is as specified in tables 1 & 2 on the next page
2. ATEX compliant pumps are suitable for use in explosive atmospheres when the equipment is properly grounded in accordance with local electrical codes
3. Conductive Polypropylene, conductive Acetal or conductive PVDF pumps are not to be installed in applications where the pumps may be subjected to oil, greases and hydraulic liquids.
4. When operating pumps equipped with non-conductive diaphragms that exceed the maximum permissible projected area, as defined in EN ISO 80079-36 : 2016 section 6.7.5 table 8, the following protection methods must be applied
 - Equipment is always used to transfer electrically conductive fluids or
 - Explosive environment is prevented from entering the internal portions of the pump, i.e. dry running.

ATEX Compliant Pump Temperature Ratings

Table 1. Category 1 & Category 2 ATEX Rated Pumps

Ambient Temperature Range	Process Temperature Range	Temperature Class	Maximum Surface Temperature
-20°C to +60°C	-20°C to +80°C	T5	T100°C
	-20°C to +108°C	T4	T135°C
	-20°C to + 160°C	T3	T200°C
	-20°C to +177°C	(225°C) T2	

Table 2. Category M1 ATEX Rated Pumps for Mining

Ambient Temperature Range	Process Temperature Range
-20°C to +60°C	-20°C to +150°C

Notes

1. The ambient temperature range and the process temperature range should not exceed the operating temperature range of the applied non-metallic parts as listed in the table below.

Table 3. Material Operating Temperatures

Material	Description	Operating Temperatures	
		Min.	Max.
Conductive Acetal	Tough, impact & abrasion resistant, low friction coefficient; generally inert, good chemical resistance except for strong acids and oxidizing agents	-20°F (-29°C)	190°F (88°C)
EPDM	Very good water & chemical resistance; poor resistance to oils & solvents; fair in ketones and alcohols	-40°F (-40°C)	280°F (138°C)
FKM (Fluorocarbon)	Good resistance to wide range of oils & solvents especially aliphatic, aromatic & halogenated hydrocarbons, acids, animal and vegetable oils; hot water & hot aqueous solutions (over 70°F [21°C]) attack FKM	-40°F (-40°C)	350°F (177°C)
Hytrel®	Good resistance to acids, bases, amines and glycols at room temperature	-20°F (-29°C)	220°F (104°C)
Neoprene	All purpose; resistance to vegetable oils; generally not affected by moderate chemicals, fats, greases, oils and solvents; attacked by strong oxidizing acids, ketones, esters, nitro & chlorinated aromatic hydrocarbons	-10°F (-23°C)	200°F (93°C)
Nitrile	Good solvent, oil, water & hydraulic fluid resistance; do not use with highly polar solvents (acetone & MEK), ozone, chlorinated & nitro hydrocarbons	-10°F (-23°C)	190°F (88°C)
Nylon	High strength & toughness over a wide temperature range; moderate to good resistance to fuels, oils & chemicals	32°F (0°C)	180°F (82°C)
Polypropylene	Thermoplastic, moderate tensile & flex strength. Resists strong acids & alkali. Attacked by chlorine, fuming nitric acid and other strong oxidizing agents	32°F (0°C)	180°F (82°C)
PVDF	Durable fluoroplastic with excellent chemical resistance; excellent for UV applications; high tensile strength and impact resistance	0°F (-18°C)	250°F (121°C)
Santoprene®	Thermoplastic elastomer with no fabric layer; long mechanical flex life; excellent abrasion resistance.	-40°F (-40°C)	275°F (135°C)
UHMW PE	Thermoplastic highly resistant to a broad range of chemicals; outstanding abrasion & impact resistance, environmental stress-cracking resistance	-35°F (-37°C)	180°F (82°C)
Urethane	Good resistance to abrasives; poor resistance to most solvents and oils	32°F (0°C)	150°F (66°C)
Virgin PTFE	Chemically inert, virtually impervious. Few chemicals react with PTFE, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures.	-35°F (-37°C)	220°F (104°C)

Table of Contents

1: PUMP SPECS

SECTION 1: PUMP SPECIFICATIONS.....4

- Explanation of Nomenclature
- Performance
- Kit Information
- Dimensional Drawings

2: INSTAL & OP

SECTION 2: INSTALLATION & OPERATION ...9

- Principle of Pump Operation
- Recommended Installation Guide
- Troubleshooting Guide
- Material Codes

3: AIR END

SECTION 3: AIR END12

- Center Section Assembly Servicing
- Center Section Assembly Exploded View and Parts List
- Air/Pilot Valve Assembly Servicing
- Air/Pilot Valve Assembly Exploded View and Parts List

4: WET END

SECTION 4: WET END.....14

- Diaphragm Assembly Servicing
- Diaphragm Assembly Exploded View and Parts List
- Fluid Section Assembly Servicing
- Fluid Section Assembly Exploded View and Parts List

5: WARRANTY

SECTION 5: WARRANTY & CERTIFICATES ..17

- Warranty
- CE Declaration of Conformity - Machinery
- ATEX Declaration of Conformity



Explanation of Pump Nomenclature

Your Model #: VM V 20 B

(fill in from pump nameplate)

Pump Brand	Product Line	Pump Size	Check Valve Type	Wetted Material	Non-Wetted Material	Diaphragm Material	Backup Diaphragm	Check Valve Material	Seat Material	Air Valve	Air Valve Option	Exhaust Option	Port Type	Port Option	Design Level
P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12	P13	P14	P15	P16

PUMP BRAND
VM Versamatic

PRODUCT LINE
V Valor

PUMP SIZE
20 2"

CHECK VALVE TYPE
B Ball

WET END MATERIALS
C Conductive Polypropylene
K PVDF (Kynar)
P Polypropylene

NON-WETTED MATERIAL
C Conductive Polypropylene
P Polypropylene

DIAPHRAGM MATERIAL
B Nitrile (Buna)
N Neoprene
R Santoprene
T PTFE Overlay
V FKM (Viton)
Z One Piece Bonded PTFE

***BACKUP DIAPHRAGM**
B Nitrile (Buna)
N Neoprene
R Santoprene
O None

CHECK VALVE MATERIAL
B Nitrile
N Neoprene
R Santoprene
T PTFE

SEAT MATERIAL
K PVDF (Kynar)
P Polypropylene

AIR VALVE
1 Standard Glyde Rings
**0 Standard Air Valve

AIR VALVE OPTION
0 Standard Glyde Rings
S Stainless / Brass sleeve & spool set - Aluminum free pump

EXHAUST OPTION
6 Threaded Muffler

PORT TYPE
U Universal ANSI/DIN Flange

PORT Option
C Center Ported
E End Ported

DESIGN LEVEL
A Design Level

*If T is selected for Diaphragm Material, select backup diaphragm "N or R"

*If Z is selected for Diaphragm Material, the backup will be "B"

*For all other Diaphragm Materials, the backup will be "O"

**Air Valve "0" must be selected for pumps with stainless / brass sleeve and spool main Air Valve Option (S), do not contain Aluminum.
Pump equipped with stainless steel pilot sleeve and stainless steel inner diaphragm plate.

ATEX Detail

	ATEX Details	Wetted Material Options	Non- Wetted Material Options	Exhaust Options	Port Options
	II 1 G Ex h IIC T5....225°C (T2) Ga II 1 D Ex h IIIC T100°C....T200°C Da I M1 Ex h I Ma	C	C	6	C

* The year of manufacture is indicated in the marking of the equipment, along with other important information

Performance

VMV20 PLASTIC

FLUID PORT SIZE

- 2" ANSI/DIN Flange

AIR INLET PORT

- 3/4" NPT Threaded

CAPACITY

- 0 to 200 gallons per minute
(0 to 757 liters per minute)

AIR DISTRIBUTION VALVE

- No-lube, no-stall design

SOLIDS-HANDLING

- Up to .68 in. (16mm)

HEADS UP TO

- 125 psi or 288 ft. of water
(8.6 bar or 88 meters)

DISPLACEMENT/STROKE


- .80 Gallon / 3.0 liter

MAXIMUM OPERATING PRESSURE

- 125 psi (8.6 bar)

PUMP WEIGHTS

- Polypropylene 69 lbs. (31 kg)
with In-line manifold option 62 lbs. (28kg)
- PVDF 103 lbs. (47kg)
with In-line manifold option 91 lbs. (41 kg)
- Conductive Polypropylene 69 lbs. (31 kg)

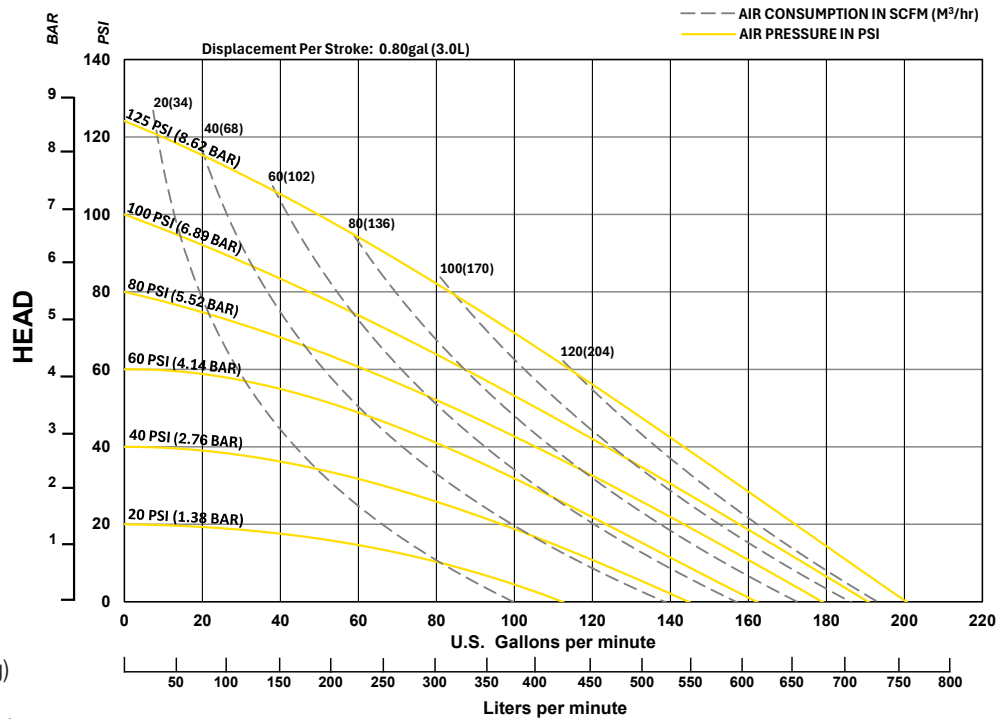

Kit Information

Air End Kits

476.V076.000 Standard;
476.V076.379 ATEX Compliant
476.V076.162 Stainless Steel / Brass sleeve & spool, aluminum free pumps

Item No.	Description
1	Assembled valve body, includes main & pilot sleeve and spool sets
7	Air Valve Gasket
8	Air Inlet Cap Gasket
10	O-Rings, Nitrile
11	Actuator Pins
12	U-Cup Seals
13	Intermediate to Inner Chamber Seals
14	Bumpers

476.V072.000 - Air Seal Kit

Item No.	Description
1-AA	Glyde Ring Assemblies (Glyde Rings & O-ring)
1-E	O-Ring, Main Air Sleeve
1-FA	O-Ring, Pilot Spool
1-GA	O-Ring, Pilot Sleeve
7	Air Valve Gasket
8	Air Inlet Cap Gasket
10	O-Rings, Nitrile
12	U-Cup Seals
13	Intermediate to Inner Chamber Seals

1: PUMP SPECS

Wet End Kits

476.V077.363 - Viton Repair Kit

Item No.	Description
15	Viton Diaphragms
20	PTFE Check Balls
29	Check Valve Seals, PTFE
30	Manifold Seals - Center Ported

476.V077.354 - Santoprene Repair Kit

Item No.	Description
15	Santoprene Diaphragms
20	Santoprene Check Balls
29	Check Valve Seals, PTFE
30	Manifold Seals - Center Ported

476.V077.360 - Nitrile Repair Kit

Item No.	Description
15	Nitrile Diaphragms
20	Nitrile Check Balls
29	Check Valve Seals, PTFE
30	Manifold Seals - Center Ported

476.V077.659 - Bonded PTFE Repair Kit

Item No.	Description
15	PTFE Bonded Diaphragm
20	PTFE Check Balls
29	Check Valve Seals, PTFE
30	Manifold Seals - Center Ported

476.V077.635 - PTFE / Neoprene Repair Kit

Item No.	Description
15	Neoprene Diaphragms
16	PTFE Overlay Diaphragm
20	PTFE Check Balls
29	Check Valve Seals, PTFE
30	Manifold Seals - Center Ported

476.V077.654 - PTFE / Santoprene Repair Kit

Item No.	Description
15	Santoprene Diaphragms
16	PTFE Overlay Diaphragm
20	PTFE Check Balls
29	Check Valve Seals, PTFE
30	Manifold Seals - Center Ported


476.V077.365 - Neoprene Repair Kit

Item No.	Description
15	Neoprene Diaphragms
20	Neoprene Check Balls
29	Check Valve Seals, PTFE
30	Manifold Seals - Center Ported

Dimensional Drawings




Valor End Ported Option- Polypropylene and PVDF Wet Side

Dimensions in inches (metric dimensions in brackets). Dimensional Tolerance .125" (3mm).

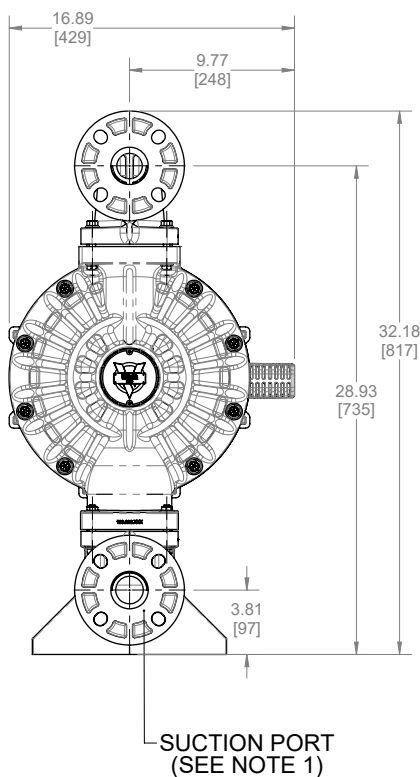



NOTES

1. SUCTION AND DISCHARGE PORT FLANGES ARE DESIGNED TO FIT BOTH ANSI 125# CONNECTION AND PN10 50mm DIN CONNECTION
3. 1" FNPT EXHAUST PORT FOR THREADED MUFFLER OR PIPING EXHAUST AIR IN SUBMERGED APPLICATIONS

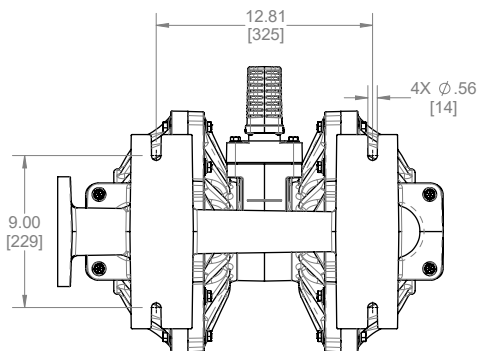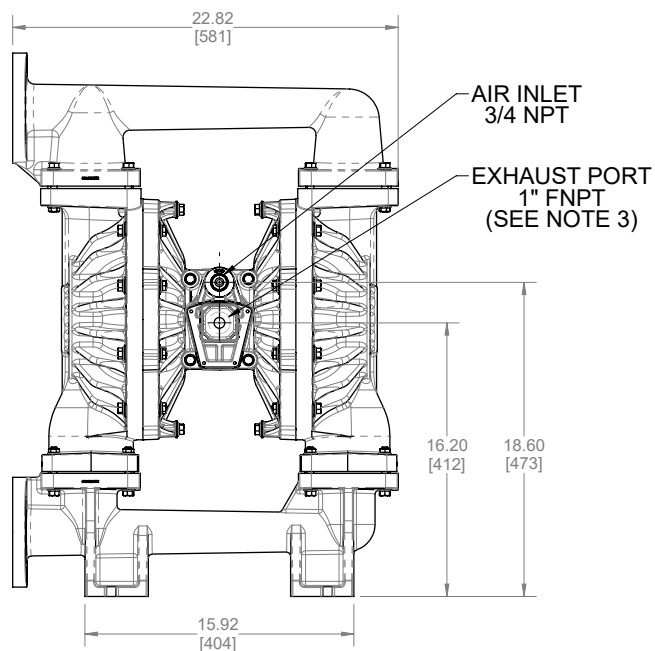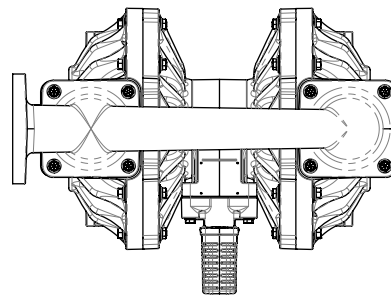

1: PUMP SPECS


Dimensions in inches (metric dimensions in brackets). Dimensional Tolerance .125" (3mm).

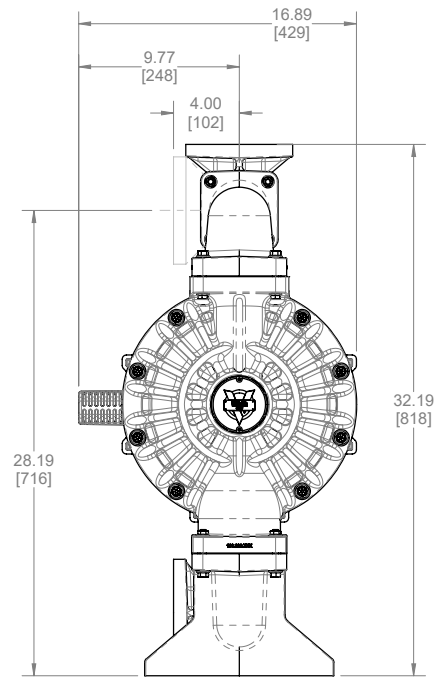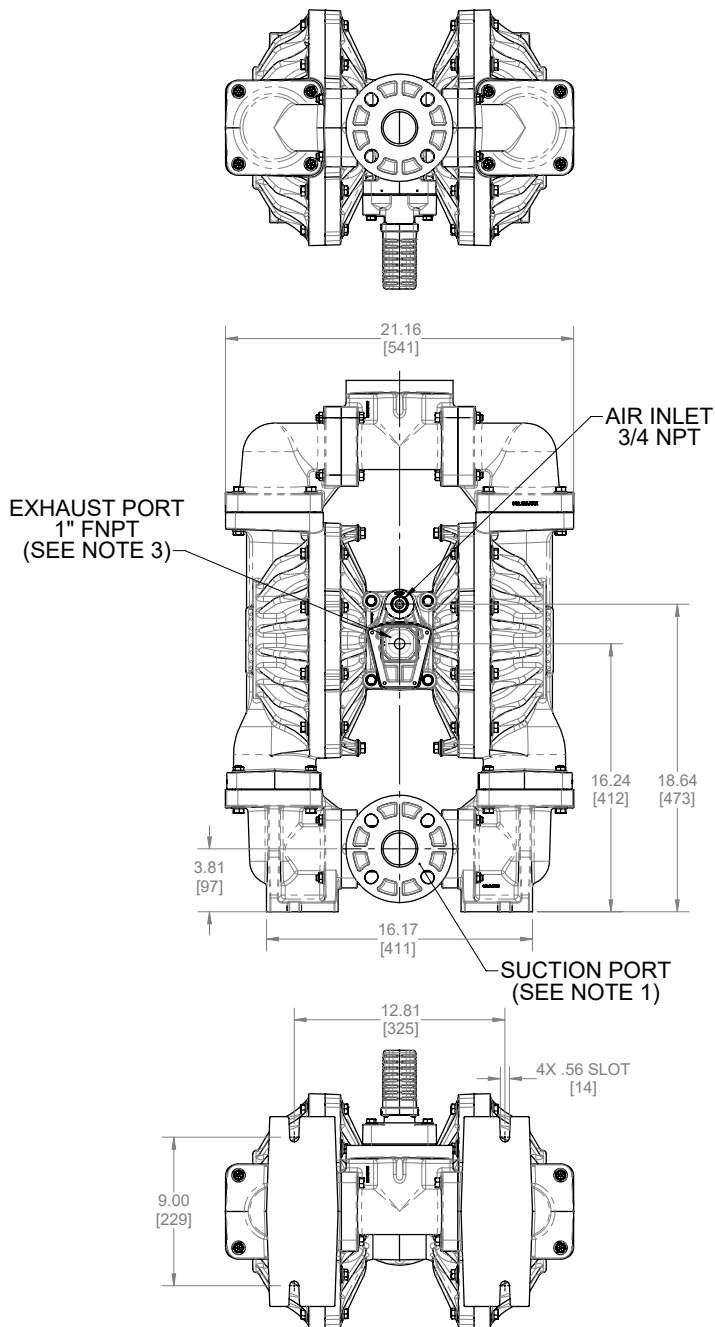

NOTES

1. SUCTION AND DISCHARGE PORT FLANGES ARE DESIGNED TO FIT BOTH ANSI 125# CONNECTION AND PN10 50mm DIN CONNECTION
2. DISCHARGE PORT CAN BE ROTATED 90° HORIZONTAL
3. 1" FNPT EXHAUST PORT FOR THREADED MUFFLER OR PIPING EXHAUST AIR IN SUBMERGED APPLICATIONS

2: INSTAL & OP

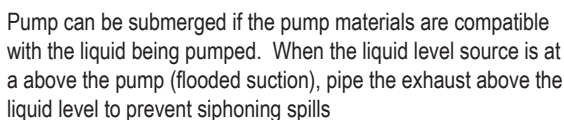

Air Valve Lubrication: The air distribution system is designed to operate without lubrication

Troubleshooting Guide

Symptom:	Potential Cause(s):	Recommendation(s):
Pump Cycles Once	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Air valve or intermediate gaskets installed incorrectly.	Install gaskets with holes properly aligned.
	Bent or missing actuator plunger.	Remove pilot valve and inspect actuator plungers.
Pump Will Not Operate / Cycle	Pump is over lubricated.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
	Lack of air (line size, PSI, CFM).	Check the air line size and length, compressor capacity (HP vs. cfm required).
	Check air distribution system.	Disassemble and inspect main air distribution valve, pilot valve and pilot valve actuators.
	Discharge line is blocked or clogged manifolds.	Check for inadvertently closed discharge line valves. Clean discharge manifolds/piping.
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Blocked air exhaust muffler.	Remove muffler screen, clean or de-ice, and re-install.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Pump chamber is blocked.	Disassemble and inspect wetted chambers. Remove or flush any obstructions.
Pump Cycles and Will Not Prime or No Flow	Cavitation on suction side.	Check suction condition (move pump closer to product).
	Check valve obstructed. Valve ball(s) not seating properly or sticking.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Clean out around valve ball cage and valve seat area. Replace valve ball or valve seat if damaged. Use heavier valve ball material.
	Valve ball(s) missing (pushed into chamber or manifold).	Worn valve ball or valve seat. Worn fingers in valve ball cage (replace part). Check Chemical Resistance Guide for compatibility.
	Valve ball(s)/seat(s) damaged or attacked by product.	Check Chemical Resistance Guide for compatibility.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
Pump Cycles Running Sluggish/Stalling, Flow Unsatisfactory	Over lubrication.	Set lubricator on lowest possible setting or remove. Units are designed for lube free operation.
	Icing.	Remove muffler screen, de-ice, and re-install. Install a point of use air drier.
	Clogged manifolds.	Clean manifolds to allow proper air flow
	Deadhead (system pressure meets or exceeds air supply pressure).	Increase the inlet air pressure to the pump. Pump is designed for 1:1 pressure ratio at zero flow. (Does not apply to high pressure 2:1 units).
	Cavitation on suction side.	Check suction (move pump closer to product).
	Lack of air (line size, PSI, CFM).	Check the air line size, length, compressor capacity.
	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Air supply pressure or volume exceeds system hd.	Decrease inlet air (press. and vol.) to the pump. Pump is cavitating the fluid by fast cycling.
	Undersized suction line.	Meet or exceed pump connections.
	Restrictive or undersized air line.	Install a larger air line and connection.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Suction line is blocked.	Remove or flush obstruction. Check and clear all suction screens or strainers.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs. Purging the chambers of air can be dangerous.
Product Leaking Through Exhaust	Diaphragm failure, or diaphragm plates loose.	Replace diaphragms, check for damage and ensure diaphragm plates are tight.
	Diaphragm stretched around center hole or bolt holes.	Check for excessive inlet pressure or air pressure. Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
Premature Diaphragm Failure	Cavitation.	Enlarge pipe diameter on suction side of pump.
	Excessive flooded suction pressure.	Move pump closer to product. Raise pump/place pump on top of tank to reduce inlet pressure. Install Back pressure device (Tech bulletin 41r). Add accumulation tank or pulsation dampener.
	Misapplication (chemical/physical incompatibility).	Consult Chemical Resistance Chart for compatibility with products, cleaners, temperature limitations and lubrication.
	Incorrect diaphragm plates or plates on backwards, installed incorrectly or worn.	Check Operating Manual to check for correct part and installation. Ensure outer plates have not been worn to a sharp edge.
Unbalanced Cycling	Excessive suction lift.	For lifts exceeding 20' of liquid, filling the chambers with liquid will prime the pump in most cases.
	Undersized suction line.	Meet or exceed pump connections.
	Pumped fluid in air exhaust muffler.	Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly.
	Suction side air leakage or air in product.	Visually inspect all suction-side gaskets and pipe connections.
	Check valve obstructed.	Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket.
	Check valve and/or seat is worn or needs adjusting.	Inspect check valves and seats for wear and proper setting. Replace if necessary.
	Entrained air or vapor lock in chamber(s).	Purge chambers through tapped chamber vent plugs.

For additional troubleshooting tips contact After Sales Support at service.warrenrupp@idexcorp.com or 419-524-8388

Material Codes - The Last 3 Digits of Part Number

Code	Description	Code	Description	Code	Description
000	Assembly, sub-assembly	333	Carbon Steel, Electroless, Nickel Plated	544	Nylon Injection Molded
010	Cast Iron	335	Galvanized Steel	550	Polyethylene
015	Ductile Iron	337	Silver Plated Steel	551	Glass Filled Polypropylene
020	Ferritic Malleable Iron	350	FDA Approved Hytrel®	552	Unfilled Polypropylene
080	Carbon Steel, AISI B-1112	351	Food Grade Santoprene®	553	Yellow Glass Filled Polypropylene
110	316 Stainless Steel – ASTM A743 CF8M	353	Geolast	555	Polyvinyl Chloride
111	316 Stainless Steel - Electro Polished	354	#203-40 Santoprene®	556	Black Vinyl
112	Alloy C – ASTM494 CW-12M01 spec.	356	Hytrel®	557	Unfilled Conductive Polypropylene
113	316 Stainless Steel - Hand Polished	357	Injection Molded Polyurethane	558	Conductive HDPE
114	303 Stainless Steel	358	Urethane Rubber Compression Mold	559	Glass Filled Conductive Polypropylene
115	302/304 Stainless Steel	359	Urethane Rubber	570	Rulon II®
117	440-C Stainless Steel (Martensitic)	360	Nitrile Rubber Color coded: RED	580	Ryton®
120	416 Stainless Steel - Wrought Martensitic	363	FKM Fluorocarbon Color coded: YELLOW	600	PTFE (virgin material)
148	Hardcoat Anodized Aluminum	364	EPDM Rubber, Color coded: BLUE	603	Blue Gylon®
150	6061-T6 Aluminum	365	Neoprene Rubber, Color coded: GREEN	604	PTFE
152	2024-T4 Aluminum (2023-T351)	366	Food Grade Nitrile	606	PTFE
155	356-T6 Aluminum	368	Food Grade EPDM	607	Envelon
156	356-T6 Aluminum	371	Philthane (Tuftane)	608	Conductive PTFE
157	Die Cast Aluminum Alloy #380	374	Carboxylated Nitrile	610	PTFE Encapsulated Silicon
158	Aluminum Alloy SR-319	375	Fluorinated Nitrile	611	PTFE Encapsulated FKM
162	Brass, Yellow, Screw Machine Stock	378	High Density Polypropylene	632	Neoprene/Hytrel®
165	Cast Bronze, 85-5-5-5	379	Conductive Nitrile	633	FKM/PTFE
166	Bronze, SAE 660	408	Cork and Neoprene	634	EPDM/PTFE
170	Bronze, Bearing Type, Oil Impregnated	425	Compressed Fibre	635	Neoprene/PTFE
180	Copper Alloy	426	Blue Gard	637	PTFE, FKM/PTFE
305	Carbon Steel, Black Epoxy Coated	440	Vegetable Fibre	638	PTFE, Hytrel®/PTFE
306	Carbon Steel, Black PTFE Coated	500	Delrin® 500	639	Nitrile/TFE
307	Aluminum, Black Epoxy Coated	502	Conductive Acetal	643	Santoprene®/EPDM
308	Stainless Steel, Black PTFE Coated	503	Conductive Acetal, Glass-Filled	644	Santoprene®/PTFE
309	Aluminum, Black PTFE Coated	506	Delrin® 150	661	EPDM/Santoprene®
313	Aluminum, White Epoxy Coated	520	Injection Molded PVDF	668	PTFE, FDA Santoprene® / PTFE
330	Zinc Plated Steel	540	Nylon	661	EPDM/Santoprene®
332	Aluminum, Electroless Nickel Plated	541	Glass Filled Nylon	668	PTFE, FDA Santoprene® / PTFE

RECYCLING

Warren Rupp, manufacturer of Versamatic, is an ISO14001 registered company and is committed to minimizing the impact our products have on the environment. Many components of Versamatic® AODD pumps are made of recyclable materials. We encourage pump users to recycle worn out parts and pumps whenever possible, after any hazardous pumped fluids are thoroughly flushed. Pump users that recycle will gain the satisfaction to know that their discarded part(s) or pump will not end up in a landfill. The recyclability of Versamatic products is a vital part of Warren Rupp's commitment to environmental stewardship.

- Delrin and Hytrel are registered tradenames of E.I. DuPont
- Nylatron is a registered tradename of Polymer Corp.
- Gylon is a registered tradename of Garlock, Inc.
- Santoprene is a registered tradename of Exxon Mobil Corp.
- Rulon II is a registered tradename of Dixon Industries Corp.

Center Section Assembly

Tools Required

- Lineman or standard pliers (air valve repair)
- Torque wrench
- 1/2" Socket
- Ratchet
- 7/32" Hex bit socket

Torque Values

- Capscrews (#4).....150 in-lb
- Capscrews (#5).....150 in-lb

Center Section Assembly Servicing

Step 1. Remove capscrews (4) to remove inner chambers (6).

Step 2. Remove air inlet cap (3) by removing 4 capscrews (5).

Step 3. Remove gasket (8), air valve assembly (1) and gasket (7); inspect gaskets for damage and wear, replace if necessary. See next page for air valve service.

Step 4. Remove actuator pins (11) and o-rings (10) inspect both components for damage and wear, replace if necessary.

Step 5. Remove seals (13) and u-cups (12), inspect both components for damage and wear, replace if necessary.

Reinstallation

Step 6. Install u-cups (12) and seals (13) into intermediate (2), open end of u-cup seal (12) will face outward towards inner chamber (6)

Step 7. Install actuator pins (11) and o-rings (10) into intermediate, o-rings (10) will hold actuator pins (11) in place and help to align inner chambers (6) during assembly.


Step 8. Install inner chambers (6) using actuator pins (11) to help align. Fasten to intermediate (2) using capscrew bolts (4), torque to value given above.

Step 9. Place gasket (7) onto valve body (1) tabs.

CAUTION: Ensure gasket is properly aligned to valve body (1), tabs on valve body will hold gasket in place for assembly (see figure to right).


Step 10. With gasket (7) on the valve body (1), slide the valve body into the intermediate (2).

Align gasket (8) with tabs on air valve body (1), install air inlet cap (3) with capscrews (5), torque to value given above.

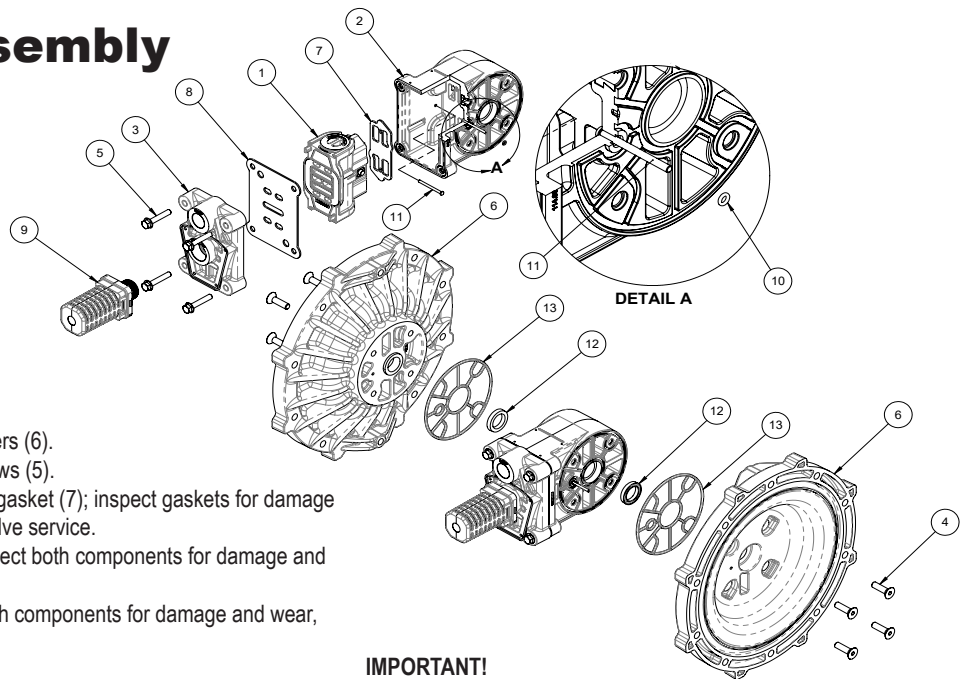

IMPORTANT!

Make sure gasket perimeter is aligned to valve body perimeter


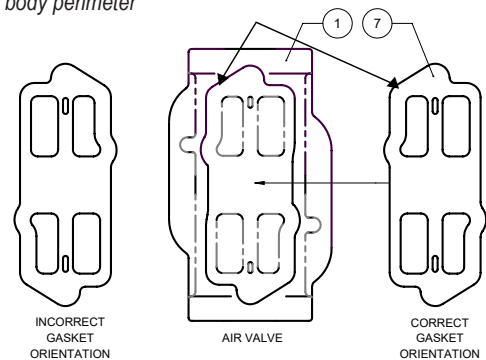


ITEM NO.	PART NUMBER	DESCRIPTION	QTY	MATERIAL	NOMENCLATURE (See Page 5)			
					P6	P11	P12	P13
1	031.219.000	Main Air Valve Assembly	1	Glass Filled Polypropylene	P			
	031.219.001	Main Air Valve Assembly - ATEX		Conductive Polypropylene	C			
	031.219.162	Stainless / Brass Main Air Valve		Glass Filled Polypropylene	P	0	S	
2	114.039.551	Intermediate	1	Glass Filled Polypropylene	P			
	114.039.559	Intermediate - ATEX		Conductive Polypropylene	C			
3	165.166.551	Air Inlet Cap	1	Glass Filled Polypropylene	P			
	165.166.559	Air Inlet Cap - ATEX		Conductive Polypropylene	C			
4	171.078.115	Capscrew, Flat Hd, 3/8-16 x 1 1/4	8	Stainless Steel	Common			
5	171.068.115	Capscrew, Flanged Hex Hd, 5/16-18 x 1.75	4	Stainless Steel	Common			
6	196.227.551	Inner Chamber	2	Glass Filled Polypropylene	P			
	196.227.559	Inner Chamber - ATEX		Conductive Polypropylene	C			
7	360.130.379	Air Valve Body Seal	1	Conductive Nitrile	Common			
8	360.131.379	Air Inlet Cap Seal	1	Conductive Nitrile	Common			
9	530.058.000	Threaded Muffler (Conductive)	1	Conductive Polypropylene				6
10	560.001.360	O-Ring	2	Nitrile	Common			
11	620.027.114	Actuator Pins	2	Stainless Steel	Common			
12	720.004.360	U-Cup Seal	2	Nitrile	Common			
13	720.080.360	Intermediate Seal	2	Nitrile	Common			

Air / Pilot Valve Assembly

Main Air Sleeve and Spool Set

Step 1. Remove end caps (1-D). Use lineman pliers and rotate end caps 90° counter-clockwise to unlock (disengage locking tabs, see figure below). Then pull the end caps straight out of bore. Channel lock or needle nose pliers are not recommended.

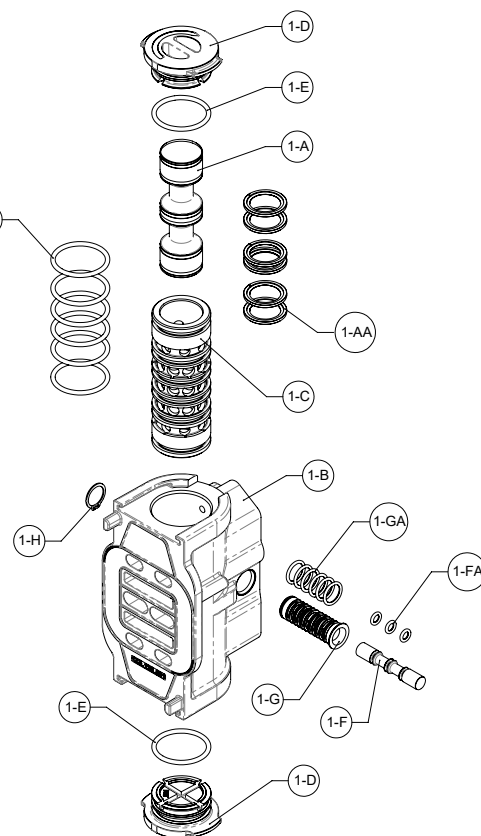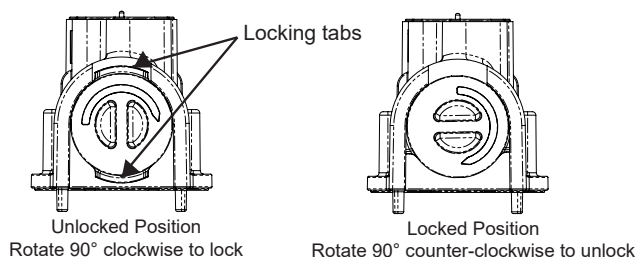

Step 2. Remove spool (1-A) from sleeve (1-C) – use caution, do not scratch spool or sleeve. Inspect O-rings and glyde rings (1-AA) for damage or wear, replace if necessary.

Step 3. Remove sleeve (1-C) from valve body (1-B).

Step 4. Inspect o-rings (1-E) for damage or wear, replace if necessary.

Reinstallation


Step 5. Install o-rings (1-E) onto sleeve (1-C), lightly lubricate o-rings (1-E).

Step 6. Press sleeve (1-C) into valve body (1-B).

Step 7. Install glyde ring assemblies (1-AA) onto spool (1-A); install o-ring first, then glyde ring over the o-ring.

Step 8. Carefully slide spool (1-A) back into the sleeve (1-C).

Step 9. Reinstall end caps (1-D). Align end caps (1-D) to the unlocked position, make sure locking tabs clear valve body (1-B) features (see figure above). Push end caps (1-D) into valve body (1-B), locking tabs should be sitting flat on valve body (1-B) surface. Using pliers, rotate end caps (1-D) clockwise 90° to engage locking tabs on end caps (1-D, see figure above).

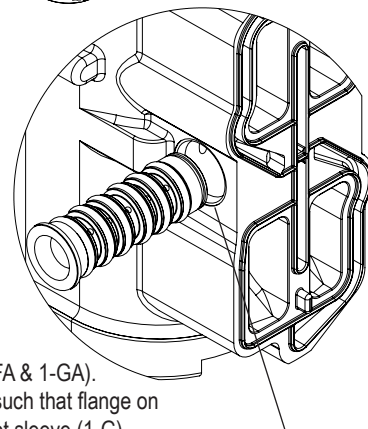

Counterbore Location

Pilot Sleeve and Spool Set

Step 1. Remove retaining ring (1-H).

Step 2. Remove spool (1-F), inspect o-rings (1-FA) for damage and wear, replace if necessary.

Step 3. Remove sleeve (1-G), inspect o-rings (1-GA) for damage and wear, replace if necessary.

Reinstallation

Step 4. Install orings (1-FA) onto spool (1-F). Install orings (1-GA) onto sleeve (1-G). Lightly lubricate o-rings (1-FA & 1-GA).

Step 5. Locate counterbore in valve body (1-B), (see figure to right). Install pilot sleeve (1-G) in valve body (1-B) such that flange on sleeve is located within counter bore of valve body (1-B). Reinstall retaining ring (1-H), slide pilot spool (1-F) into pilot sleeve (1-G).

ITEM NO.	PART NUMBER	DESCRIPTION	031.219.000/ QTY.	ATEX RATED PUMPS	031.219.162/ QTY.
				031.219.001/QTY.	
1-A	775.062.000	Main Air Spool Assembly, with O-rings	1	1	-
1-AA	675.075.000	Glyde Ring Assembly, with O-rings	6	6	-
1-A	031.139.162	Stainless / Brass Sleeve and Spool Set	-	-	1
1-B	095.128.551	Air Valve Body	1	-	1
1-B	095.128.559	Air Valve Body	-	1	-
1-C	755.048.148	Main Air Sleeve Assembly	1	1	-
1-D	165.164.541	End Cap	2	2	2
1-E	560.020.360	O-Ring	8	8	8
1-F	775.061.000	Pilot Spool Assembly, W/ O-rings	1	1	1
1-FA	560.023.360	O-Rings	3	3	3
1-G	755.052.000	Pilot Sleeve Assembly, with O-Rings	1	1	-
1-G	755.052.002	Stainless Steel Pilot Sleeve with O-Rings	-	-	1
1-GA	560.033.360	O-Ring	6	6	6
1-H	675.037.080	Retaining Ring	1	1	1


Diaphragm Assembly

Tools Required

- Torque wrench
- ½" Socket
- 6 point socket, 1.5" or 38 mm
- Ratchet

Torque Values

- Outer diaphragm plate (18) to inner diaphragm plate (17)320 in-lb
- Diaphragm plate assemblies to shaft (19).....120 in-lb

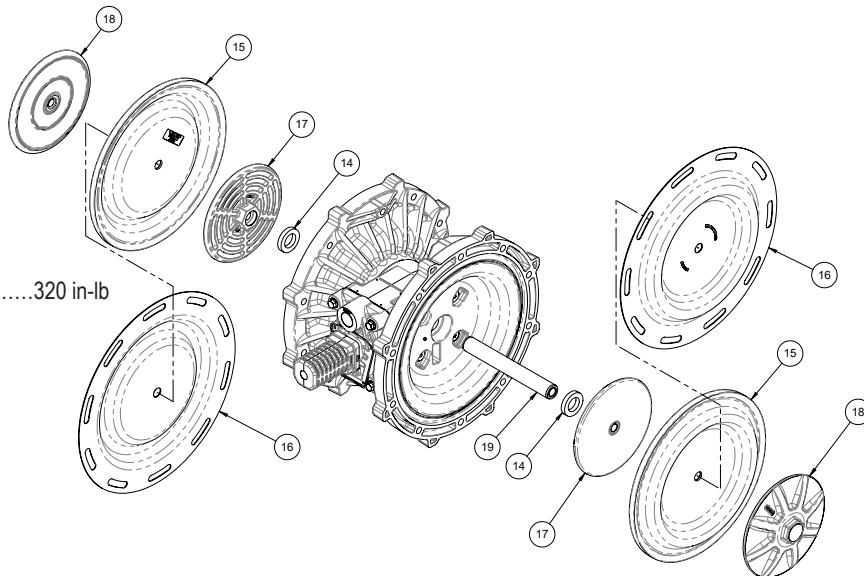

- Step 1.** With manifolds and outer chambers removed, remove outer diaphragm plate (18), diaphragm overlay (16), if equipped, diaphragm (15) and inner plate (17) from one side. NOTE: do not use pipe wrench on hex of outer diaphragm plate (18) best option: 6 point, 1.5" or 38mm socket
- Step 2.** Remove the remaining diaphragm assembly and shaft from intermediate (2). Hold diaphragm shaft (19) and remove remaining diaphragms (15) and inner and outer plates (17 & 18). NOTE: Flaws in diaphragm shaft (19) surface can damage u-cups (12), use caution, do not use pipe wrenches
- Step 3.** Inspect diaphragms (15) for wear, cracks or chemical attack. Inspect inner and outer plates (17 & 18) for deformities and wear. Inspect diaphragm shaft (19) for wear or marks. Clean or repair if appropriate, replace as required.
- Step 4.** Remove u-cup seal (12), and bumpers (14) inspect for wear, replace if necessary; clean before re-installation.

Reinstallation

- Step 5.** Lightly lubricate diaphragm contact faces of inner and outer diaphragm plates (17 & 18), with compatible material. When using PTFE overlay diaphragms, no lubrication is required on outer diaphragm plate.
- Step 6.** Hold the inner diaphragm plate (17) by the hex with either a vise or 6 point 1.5" (38mm) socket or wrench. Locate the text "AIR SIDE" on the diaphragm (15) with air side facing the inner diaphragm plate surface. Torque outer diaphragm plate (18) to inner diaphragm plate (17), to value given above. Repeat step for second diaphragm and plate assembly.
- Step 7.** Attach 1 diaphragm assembly (from step 6) to diaphragm shaft (19), torque to specified value above. Lightly lubricate diaphragm shaft (19). Slide assembly through inner chamber holes and align diaphragm seal bead with inner chamber. With assembly installed into intermediate and inner chambers, install opposite diaphragm assembly onto diaphragm shaft (19), torque to specified value above.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY	MATERIAL	NOMENCLATURE (SEE PAGE 5)			
					P5	P7	P8	P12
14	132.141.357	Bumper	2	Urethane	Common			
15	286.129.354	Diaphragm	2	Santoprene		R	0	
	286.129.360				B	0		
	286.129.363				V	0		
	286.129.365				N	0		
	286.133.000				Z	B		
16	286.130.600	Diaphragm Overlay	2	PTFE		T	N/R	
17	612.265.157	Inner Diaphragm Plate	2	Aluminum	Common			
	612.265.110			Stainless Steel				S
	612.267.157	Inner Diaphragm Plate (One-Piece Bonded)		Aluminum		Z		
	612.267.110			Stainless Steel		Z		S
18	612.266.520	Outer Diaphragm Plate	2	PVDF	K			
	612.266.552			Unfilled Polypropylene	C/P			
19	685.040.120	Diaphragm Rod	1	416 Stainless Steel	Common			

*Pumps fitted with the 286.133.000 PTFE Bonded diaphragms will not use outer diaphragm plates (Item 18)

Fluid Section Assembly

Tools Required

- Torque wrench
- 9/16" Socket
- Ratchet
- 9/16" box end wrench

Torque Values

- End ported manifolds (26 & 27) or Elbows (23 & 24) to outer chambers (22).....160 in-lb
- Outer chambers (22) to inner chambers (6)160 in-lb
- Elbows (23 & 24) to manifold (25).....160 in-lb

Manifold, check balls and outer chamber service

** Pump either equipped with end ported manifolds (26 & 27) or center ported configuration. Center ported manifolds include elbows (23 & 24) and manifold (25).

Step 1. Remove 8 capscrews (21) from discharge manifold flange, remove seats (31), seals (29) and check balls (20); inspect seals, seats, and check balls for damage and wear, replace as necessary.

Step 2. Flip pump upside down 180°, remove 8 capscrews (21) from suction manifold, remove seats (31), seals (29) and check balls (20); inspect seals, seats, and check balls for damage and wear, replace as necessary.


Step 3. Remove 20 capscrews (21) from outer chamber (22) flanges.

Reinstallation

Step 4. Attach outer chambers (22) using 20 capscrews (21), torque to value shown above

Step 5. Install seat seals (29), check balls (20) and seats (31) on suction side of pump. Attach suction manifold using 8 capscrews (21), torque to value shown above. Torque manifolds by torquing one side at a time (torque 4 bolts on left flange, then torque 4 remaining bolts on right flange), torque to value shown above.

Step 6. Rotate pump 180° and repeat steps 4 – 5 for the second manifold.

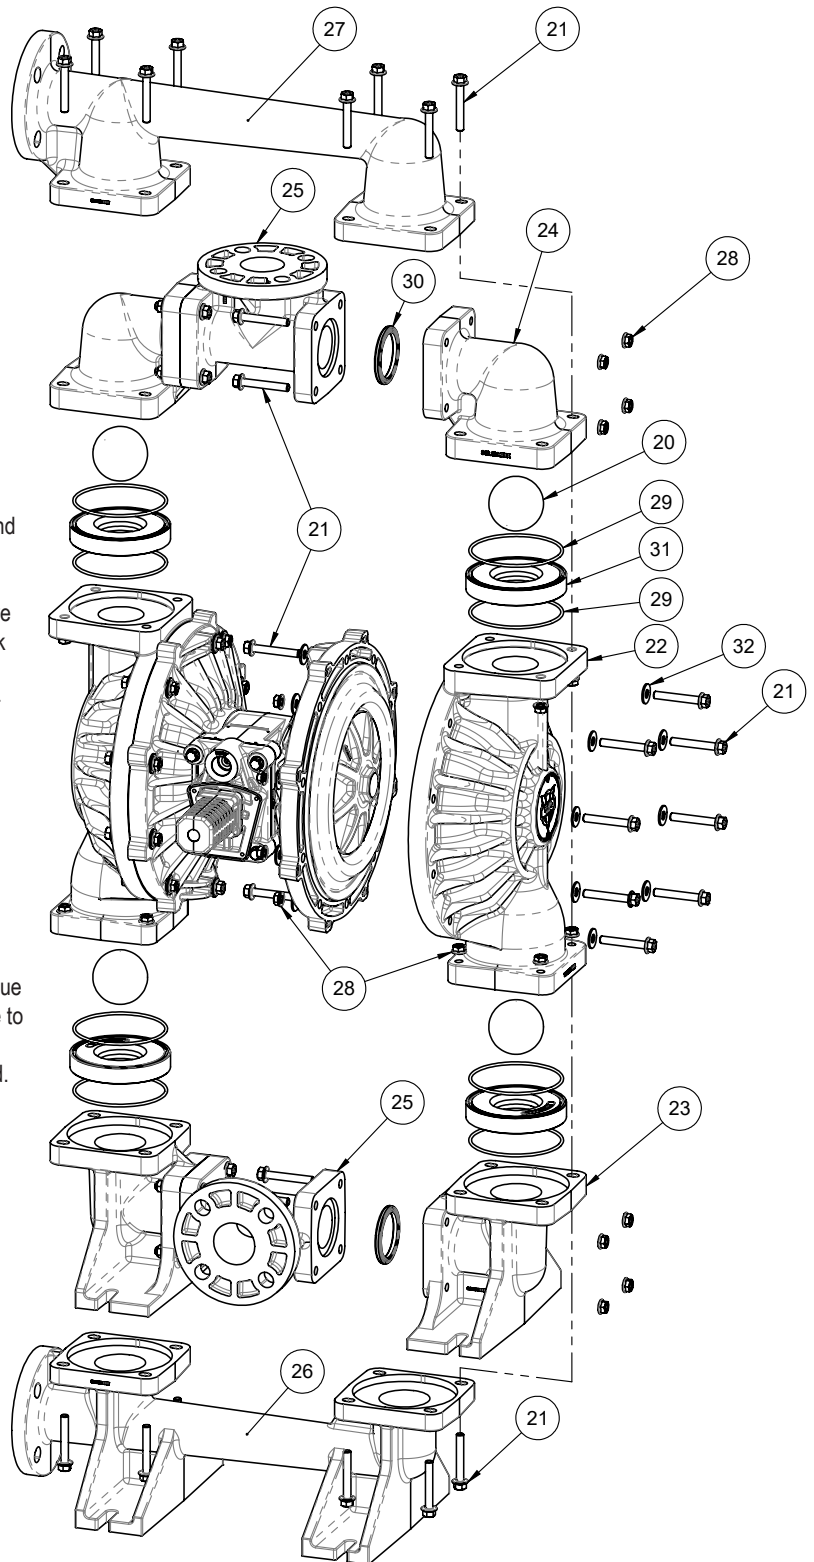

Fluid Section Assembly

ITEM NO.	PART NUMBER	DESCRIPTION	PORTING		MATERIAL	NOMENCLATURE (See Page 5)			
			CENTER	END		P5	P9	P10	P15
			QTY	QTY					
20	050.017.354	Check Ball	4		Santoprene		R		
	050.017.360				Nitrile		B		
	050.017.365				Neoprene		N		
	050.018.600				PTFE		T		
21	171.108.115	Capscrew, Flanged Hex Hd, 3/8-16 x 2.5	52	36	Stainless Steel	Common			
22	196.228.520	Outer Chamber	2		PVDF	K			
	196.228.552				Unfilled Polypropylene	P			
	196.228.557				Conductive Polypropylene	C			
23	312.134.520	Suction Elbow	2	-	PVDF	K			C
	312.134.552				Unfilled Polypropylene	P			C
	312.134.557				Conductive Polypropylene	C			C
24	312.129.520	Discharge Elbow	2	-	PVDF	K			C
	312.129.552				Unfilled Polypropylene	P			C
	312.129.557				Conductive Polypropylene	C			C
25	518.234.520	Manifold	2	-	PVDF	K			C
	518.234.552				Unfilled Polypropylene	P			C
	518.234.557				Conductive Polypropylene	C			C
26	518.236.520	Suction Manifold	-	1	PVDF	K			E
	518.236.552				Unfilled Polypropylene	P			E
27	518.237.520	Discharge Manifold	-	1	PVDF	K			E
	518.237.552				Unfilled Polypropylene	P			E
28	544.002.115	Nut, Hex Flange, 3/8-16	44	28	Stainless Steel	Common			
29	560.216.604	Check Valve Seal	8		PTFE	Common			
30	720.038.600	Manifold Seal	4	-	PTFE				C
31	722.135.520	Check Valve Seat	4		PVDF	K		K	
	722.135.552				Unfilled Polypropylene	C/P		P	
32	901.005.115	Washer, Flat	36		Stainless Steel	Common			

4: WET END

5 - YEAR Limited Product Warranty

Quality System ISO9001 Certified • Environmental Management Systems ISO14001 Certified

Versamatic warrants to the original end-use purchaser that no product sold by Versamatic that bears a Versamatic brand shall fail under normal use and service due to a defect in material or workmanship within five years from the date of shipment from Versamatic's factory.

The use of non-OEM replacement parts will void (or negate) agency certifications, including CE, ATEX, CSA, 3A and EC1935 compliance (Food Contact Materials). Warren Rupp, Inc. cannot ensure nor warrant non-OEM parts to meet the stringent requirements of the certifying agencies.

~ See complete warranty at http://vm.salesmrc.com/pdfs/VM_Product_Warranty.pdf



EC Declaration of Conformity

Manufacturer:
Warren Rupp, Inc.
800 N. Main Street
Mansfield, Ohio, 44902 USA

Certifies that Air-Operated Double Diaphragm Pump Models: E Series, VL Series, VM Series, U2 Series; Submersible Pump Models: VSMA3 Series, SPA15 Series and Surge Dampener/Suppressor Models: VDA Series, VTA Series comply with the European Community Directive 2006/42/EC on Machinery, according to Annex VIII. This product has used Harmonized Standard EN809:2012, Pumps and Pump Units for Liquids - Common Safety Requirements, to verify conformance.

October 3, 2022

DATE/APPROVAL/TITLE:

Technical File on record with:
DEKRA Certification B.V.
Meander 1051
6825 MJ Arnhem
The Netherlands

Signature of authorized person

Dennis Hall

Printed name of authorized person

Engineering Manager

Title





EC Declaration of Conformity

Manufacturer:
Warren Rupp, Inc.
800 N. Main Street
Mansfield, Ohio, 44902 USA

Certifies that Air-Operated Double Diaphragm Pump Models: E Series, VL Series, VM Series, U2 Series; Submersible Pump Models: VSMA3 Series, SPA15 Series and Surge Dampener/Suppressor Models: VDA Series, VTA Series comply with the United Kingdom Statutory Instruments 2008 No. 1597, The Supply of Machinery (Safety) Regulations 2008, according to Annex VIII. This product has used Designated Standard EN809:2012, Pumps and Pump Units for Liquids - Common Safety Requirements, to verify conformance.

October 17, 2022

DATE/APPROVAL/TITLE:

Technical File on record with:
DEKRA Certification UK Limited
Stokenchurch House
Oxford Road
Stokenchurch
HP14 3SX

Signature of authorized person

Dennis Hall

Printed name of authorized person

Engineering Manager

Title



**VERSAMATIC®****ATEX**

EU Declaration of Conformity

Manufacturer:

Warren Rupp, Inc.
A Unit of IDEX Corporation
800 North Main Street
Mansfield, OH 44902 USA

This declaration of conformity is issued under the sole responsibility of the manufacturer. Warren Rupp, Inc. declares that Air Operated Double Diaphragm Pumps (AODD) and Surge Suppressors listed below comply with the requirements of Directive **2014/34/EU** and applicable harmonized standards.

Harmonized Standards:

- EN ISO 80079-36: 2016
- EN ISO 80079-37: 2016

1. AODD Pumps and Surge Suppressors - Technical File on record with: DEKRA Certification B.V.
Meander 1051
6825 MJ Arnhem
The Netherlands

Hazardous Location Applied:

-  II 2 G Ex h IIC T5...225°C (T2) Gb
II 2 D Ex h IIIC T100°C...T200°C Db
- Metal pump models with external aluminum components (E-series, VL Series, VMD Series)
 - Versa-Surge® surge suppressors (VTA-Series)

-  I M2 Ex h Mb
 II 2 G Ex h IIC T5...225°C (T2) Gb
II 2 D Ex h IIIC T100°C...T200°C Db
- Metal pump models with no external aluminum (E-Series)
 - Conductive plastic pumps (E-Series, VMV Series Plastic)

-  II 2 G Ex h IIB T5...225°C (T2) Gb
II 2 D Ex h IIB T100°C...T200°C Db
- E1 HP & E2 HP Series due to the projected area of non-conductive external air hoses


2. AODD Pumps - EU Type Examination Certificate No.: DEKRA 18ATEX0094X - DEKRA Certification B.V. (0344)
Meander 1051
6825 MJ Arnhem
The Netherlands

Hazardous Location Applied:

-  I M1 Ex h I Ma
 II 1 G Ex h IIC T5...225°C (T2) Ga
II 1 D Ex h IIIC T100°C...T200°C Da
- Conductive plastic pumps equipped with conductive muffler (VMV Series)

➤ See "Safety Information" page for conditions of safe use

DATE/APPROVAL/TITLE:
9 NOV 2023

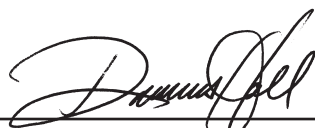
Dennis Hall
Engineering Manager

**VERSAMATIC®****UKEx**

EU Declaration of Conformity

Manufacturer:

Warren Rupp, Inc.
A Unit of IDEX Corporation
800 North Main Street
Mansfield, OH 44902 USA

This declaration of conformity is issued under the sole responsibility of the manufacturer.
Warren Rupp, Inc declares that Air Operated Double Diaphragm Pumps (AODD) and Surge Suppressors listed below comply with the requirements of United Kingdom Statutory Instruments **2016 No. 1107** and all the applicable standards.

Designated Standards:

- EN ISO 80079-36: 2016
- EN ISO 80079-37: 2016

1. AODD Pumps and Surge Suppressors - Technical File on record with: DEKRA Certification UK Limited

Stokenchurch House
Oxford Road
Stokenchurch
HP14 3SX

Hazardous Location Applied:

II 2 G Ex h IIC T5...225°C (T2) Gb
II 2 D Ex h IIIC T100°C...T200°C Db

- Metal pump models with external aluminum components (E-series, VL Series, VMD Series)
- Versa-Surge® surge suppressors (VTA-Series)



I M2 Ex h Mb
II 2 G Ex h IIC T5...225°C (T2) Gb
II 2 D Ex h IIIC T100°C...T200°C Db

- Metal pump models with no external aluminum (E-Series)
- Conductive plastic pumps (E-Series, VMV Series Plastic)



II 2 G Ex h IIB T5...225°C (T2) Gb
II 2 D Ex h IIB T100°C...T200°C Db

- E1 HP & E2 HP Series due to the projected area of non-conductive external air hoses

➤ See "Safety Information" page for conditions of safe use

DATE/APPROVAL/TITLE:
9 NOV 2023

Dennis Hall
Engineering Manager