
E1 1" Bolted Plastic PumpsWith Metallic Center Sections Operating Instructions





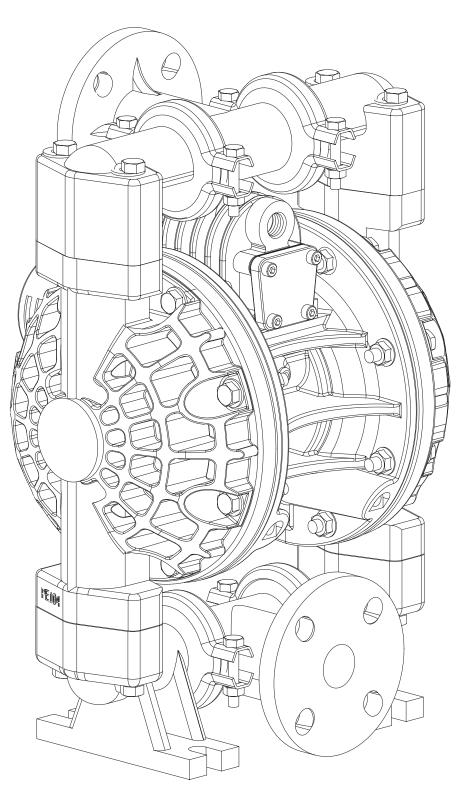


E1 Polypropylene

E1 Kynar

IM.



SPECIFICATIONS AND PERFORMANCE

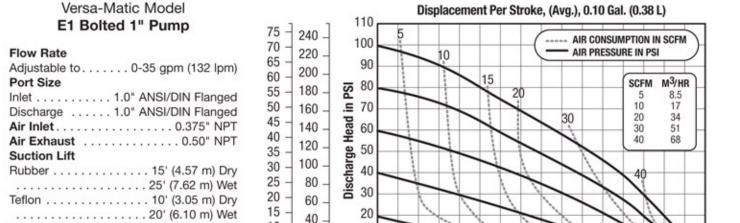

10

5

20

15

60

20

Capcity in U.S. Gallons Per Minute

Capcity in Liters Per Minute

80

100

35

120

140

40

Shipping Weights
Polypropylene 24 lbs (10.90 kg)
Kynar 25 lbs (11.34 kg)

Max. Particle Size (Dia.) . . 0.125" (3 mm)

dB(A) Reading 67.1 dB(A)

Caution: do not exceed 100 psig (6.9 bar) liquid or air supply pressure.

<u>CAUTION:</u> Plastic pumps and component are <u>not</u> UV stabilized. Ultraviolet radiation can damage these parts and negatively affect material properties. Do not expose to UV light for extended periods of time.

10

5


0


Meters

20 -

0 -

Feet

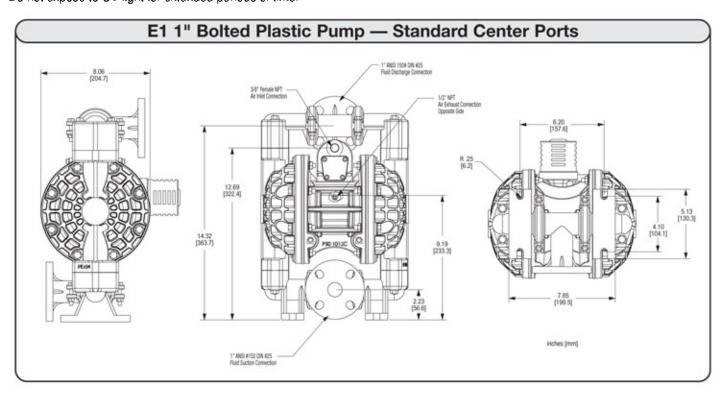

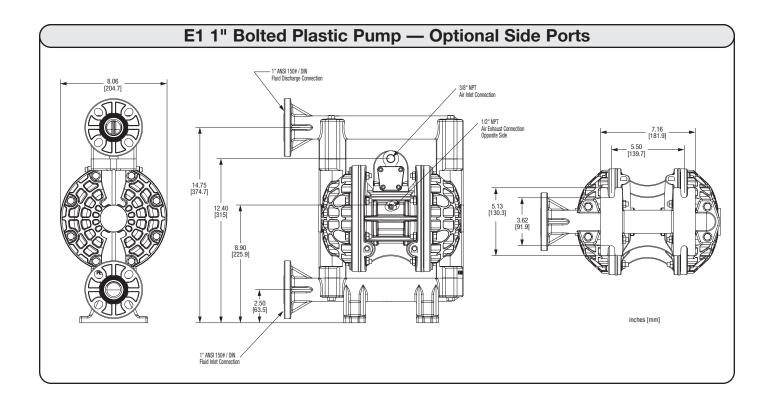

SAFETY WARNINGS

Read these instructions completely before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual could result in death, serious bodily injury and/or property damage including damage to the pump and/or voiding the factory warranty.

Correct pump selection is crucial to the pump operation. Please assure pressure, temperature and chemical compatibility before installation. Please consult Versa-Matic Pump, Engineering Specifications, Chemical Compatibility Chart, or your distributor if in doubt about any application.

Operating Limitations for Various Elastomers

Neoprene	0°F (-18°C) to 200°F (93°C)
Buna-N	10°F (-12°C) to180°F (82°C)
Nordel	-60°F (-51°C) to 280°F (138°C)
Viton	-40°F (-40°C) to 350°F (176°C)
Teflon	40°F (4°C) to 220°F (105°C)
Polyurethane	10°F (-12°C) to 170°F (77°C)
XL TPE	-20°F (-29°C) to 300°F (149°C)
FDA Hytrel	-20°F (-29°C) to 220°F (104°C)

Operating Limitations for Plastic Pumps

Kynar (PVDF)	10°F (-12°C) to 225°F (107°C)
Polypropylene	32°F (0°C) to 175°F (79°C)

Maximum temperature limits are based upon mechanical stress only. Certain chemicals and environment conditions significantly reduce maximum safe temperature limits.

Before pump operation, inspect all gasketed fasteners for looseness caused by gasket creep. Re-torque all loose fasteners to prevent leakage. Follow recommended torques

stated in this manual. Failure of the sealing components creates the possibility of jetting or forceful discharge of pumped material at a potentially harmful velocity.

Be certain that approved eye protection and protective clothing are always worn during installation, service, maintenance or when in the vicinity of the pump. Failure to follow these recommendations may result in serious injury or death.

Never allow the piping system to be supported by the pump manifolds or valve housing. The manifolds and valve housing are not designed to support any structural weight and failure of the pump may result.

Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers, or other miscellaneous equipment must be grounded.

Noise levels can exceed 85 dBA. Take precautions to prevent personal injury due to excessive pump noise.

Do not exceed pump maximum operating pressure (found on label and/or operating manual.)


Before doing any maintenance or repair on this pump, be certain all pressure is completely vented for the pump, suction, discharge, piping, and all other openings.

In the event of a diaphragm rupture, pumped material may enter the air end of the pump and be discharged into the atmosphere. If pumping a product that is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe disposition.

INSTALLATION, OPERATION AND MAINTENANCE

Installation

The pump should be mounted in a vertical position. In permanent installations, the pump should be attached to plant piping using a flexible coupling on both the intake and discharge connections to reduce vibration to the pump and piping. To further reduce vibration, a surge suppressor next to the pump may be used.

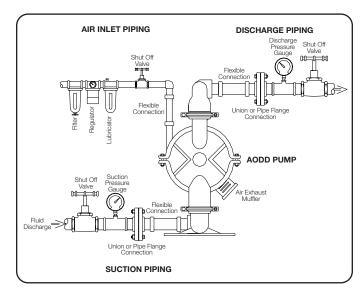

Suction pipe size should be at least the same diameter as the inlet connection size, even larger if highly viscous fluid is to be pumped. If suction hose is used, it must be of a non-collapsible reinforced type. Discharge piping should be of at least the same diameter as the discharge connection. It is critical,

Recommended Piping Connections

Pump Size	Minimum Air Line Size	Minimum Suction Line Size
1/2"	1/2"	1/2"
1"	1/2"	1"
1-1/2"	1/2"	1-1/2"
2"	1/2"	2"
3"	3/4"	3"

E1 Bolted Plastic Pump Torque Settings

Manifold Bolts	165 in-lbs (18.6 N-m)
Water Chamber Bolts	160 in-lbs (18.1 N-m)
Diaphragm Plates — Rubber	10 ft-lbs (13.6 N-m)
Diaphragm Plates — Teflon	10 ft-lbs (13.6 N-m)
Air Valve Cap Screws	30 in-lbs (3.4 N-m)

especially on the suction side of the pump, that all fittings and connections are air tight or pumping efficiency will be reduced and priming will be difficult.

Make certain the air supply line and connections and compressor are capable of supplying the required pressure and volume of air to operate the pump at the desired flow rate. The quality of the compressed air source should be considered. Air that is contaminated with moisture and dirt may result in erratic pump performance and increased maintenance cost as well as frequent process "down time" when the pump fails to operate properly.

Pump Operation


The pump is powered by compressed air. Compressed air is directed to the pump air chamber by the main air valve. The compressed air is separated from the fluid by a membrane called a diaphragm. The diaphragm in turn applies pressure on the fluid and forces it out of the pump discharge. While this is occurring, the opposite air chamber is de-pressurized and exhausted to atmosphere and fluid is drawn into the pump suction. The cycle again repeats, thus creating a constant reciprocating action which maintains flow through the pump. The flow is always in through the bottom suction connection and out through the top discharge connection. Since the air pressure acts directly on the diaphragms, the pressure applied to the fluid roughly approximates the air supply pressure supplied to the main air valve.

Elastomer Suffix Codes		
Suffix Code	Material	
A	Acetal	
BN	Buna-N, Nitrile	
N	Neoprene	
ND	Nordel, EPDM	
TF	Teflon	
FG	Hytrel	
XL	XL, Santoprene	
VT	Viton	
TX	Bonded Teflon	

PARTS LIST

			AIR VALVE ASS	EMBLY	
ltem	Description	Qty		Aluminum	
1	Valve Body	1		P50-102A	
2	Valve Spool	1		P98-104	
3	Valve Spool U-cup	2		P098-104A	
4	E nd Cap	2		P98-300	
5	E nd Cap Gasket	2		P98-110	
6	Bearing Sleeve	2		P98-103	
6A	Bearing Sleeve O-ring	2		P98-103A	
7	Air Diverter	1		P98-105	
8	Valve Insert	1		P98-106	
9	Valve Gasket	1		P98-111	
10	Valve Cap Screw	12		P24-208	
			AIR END ASSE		
ltem	Description	Qty		Aluminum	
11	Center Section	1		P50-101SC	
18	Pilot Shaft	1		P50-112	
19	Pilot Shaft Spacer	5		P24-106	
20	Pilot Shaft O-Ring	6		P24-107	
21	Nut	2		P24-108	
	Shaft Retainer	2		E101B	
25 33	Shaft Retainer Screw	4		P24-208 VTM-4	
33	Muffler Grounding Strap	1			
	(not shown)	1		E518 (Poly Conductive model only)	
	MIOC SHOWIT		DIAPHRAGM AS	SEMBLY	
ltem	Description	Qty	TPE Rugged	Teflon Bonded	Teflon 2-Piece
	Main Shaft O-Ring	2	P 50-403	P50-403	P50-403
35	Main Shaft	1	P50-107	P50-108	P50-108
37	Inner Diaphragm Plate	2	V181C	V181TI	V181TI
38	Outer Diaphragm Plate	2	PE113, KE113	PV181TO, KV181TO	PV181TO, KV181TO
40	Diaphragm	2	V183BN-1, V183N-1, V183ND-1, V183TPEXL-1, V183TPEFG-1, V183VT	V183TX	V183TF-1
41	Back-up Diaphra gm	2	N/A	N/A	V183TB
			WET END ASS	EMBLY	
ltem	Description	Qty	P olypropylene	Kynar	Poly Conductive
	Water Chamber	2	PE104	KE104	PE104-ATEX
45	Water Chamber Bolt	16	SV187A	SV187A	SV187A
47	Water Chamber Washer	16	SV189C	SV189C	SV189C
48	Water Chamber Nut	16	SV185B	SV185B	SV185B
50	Valve Seat	4	PE108	KE108	PE108-ATEX
	Valve Seat O-Ring	4		V90BN, V90ND, V90VT, V190TES	
52	Valve Ball	4		<u> </u>	191TPEXL, V191VT
	la cultor i		Port O ption 1: 0	Center port	ı
53	Manifold Discharge Elbow	2	PV186	KV186	N/A
54	Manifold Inlet Elbow	2	PV187	KV187	N/A
55	Manifold Tee	2	PV188	KV188	N/A
56	Manifold Tee O-Rin g	4		V188VT, V188XL	N/A
57	Manifold Tee Bolt	8	SV189B	, SV189B	N/A
58	Manifold Tee Clamp	8	SV189	SV189	N/A
59	Manifold Tee Nut	8	SV162C	SV162C	N/A
63	Inlet Manifold Bolt	4	E 120A	E120A	N/A
64	Manifold Washer	8	SV189C	SV189C	N/A
66					
	D'	1 4 1	Port O ption 2:	•	DE426 ATEV
60	Dischar ge Manifold	1	PE120	KE120	PE120-ATEX
61	Inlet Manifold	1	PE120F	KE120F	PE120F-ATEX
63	Inlet Manifold Bolt	8	E 120A	E120A SV189C	E120A SV189C
64 65	Manifold Washer	8	SV189C	5V189C E120B	E120B
65	Dischar ge Manifold Bolt	8	E 120B	EIZUD	EIZUD

EXPLODED VIEWS

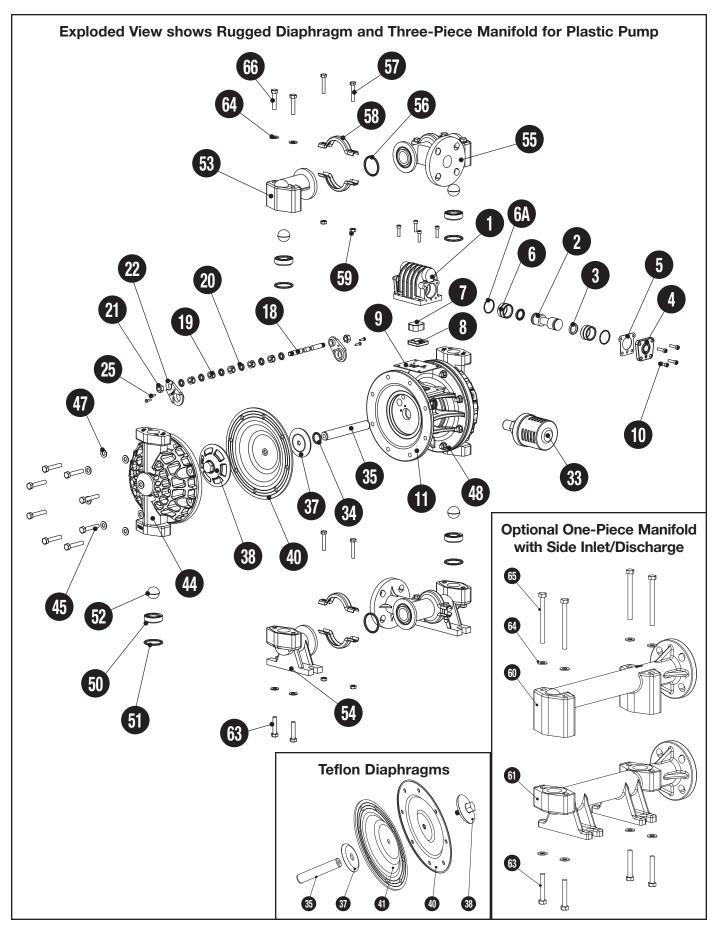

REPAIR & MAINTENANCE KITS

	AIR VALVE KIT			
	E1A AV KIT			
Part #	Description	Qty.		
P98-104A	U-Cup Seal	2		
P98-103	Sleeve Bearing	2		
P98-103A	Sleeve O-ring	2		
P98-105	Air Diverter	1		
P98-106	Valve Insert	1		
P98-111	Gasket, Valve	1		
P98-110	Gasket, End Cap	2		

PILOT VALVE KIT		
	E1A PV KIT	
Part #	Description	Qty.
P50-119	Spacer, Pilot Shaft	2
P24-106	Ring, Pilot Valve	5
P24-107	O-ring, Pilot Valve	6
P24-108	Stop Nut	2
P50-403	Bushing O-ring	2
E101B	Shaft Retainer	2
P24-208	Cap Screw	4

MAINTENANCE KIT - Rubber			
	E1-CMK-MS-RMB		
Part #	Description	Qty.	
P50-119	Spacer, Pilot Shaft	2	
P24-106	Ring, Pilot Valve	5	
P24-107	O-ring, Pilot Valve	6	
P24-108	Stop Nut	2	
P50-403	Bushing O-ring	2	
P50-107	Shaft	1	
P50-112	Pilot Shaft	1	
P98-104	Spool	1	
E101B	Shaft Retainer	2	
P24-108	Stop Nut	2	
P98-103	Sleeve Bearing	2	
P98-103A	Sleeve O-ring	2	
P98-111	Gasket, Valve	1	
P98-110	Gasket, End Cap	2	
VTM-4	Muffler	1	
P24-208	Cap Screw	4	

MAINTENANCE KIT - Teflon			
	E1-CMK-MS-TMB		
Part #	Description	Qty.	
P50-119	Spacer, Pilot Shaft	2	
P24-106	Ring, Pilot Valve	5	
P24-107	O-ring, Pilot Valve	6	
P24-108	Stop Nut	2	
P50-403	Bushing O-ring	2	
P50-108	Shaft	1	
P50-112	Pilot Shaft	1	
P98-104	Spool	1	
E101B	Shaft Retainer	2	
P24-108	Stop Nut	2	
P98-103	Sleeve Bearing	2	
P98-103A	Sleeve O-ring	2	
P98-111	Gasket, Valve	1	
P98-110	Gasket, End Cap	2	
VTM-4	Muffler	1	
P24-208	Cap Screw	4	

ATEX INFORMATION

Products:

1. Elima-Matic and Ultra-Matic Pumps

II 2 G / II 3 G EEx c T4/T5

Group II, category 2 and 3, gas explosive atmosphere, constructional safety ignition protection, Temperature rating "T4" for fluids up to 130°C and "T5" for fluid up to 95°C. Temperatures are not to exceed the ATEX ratings.

2. Elima-Matic Cast Iron Pumps with Stainless Steel Air Ends

II M2 EEx c I T4/T5

Group I, category M2, constructional safety ignition protection, Temperature rating "T4" for fluids up to 130°C and "T5" for fluid up to 95°C. Temperatures are not to exceed the ATEX ratings.

This includes the various sizes, elastomers and threading options. See Model Sheet for Details.

Constructed after 2003

CAUTION: USE CARE WHEN PUMPING HOT FLUIDS

Versa-Matic Pump Company

6017 Enterprise Drive Export, PA 15632-8969 (724) 327-7867 (724)327-4300 — fax

www.versamatic.com

Local Authorized Distributer:		

Teflon® is a registered trademarks of DuPont. Versa-Dome®, Versa-Matic®, Versa-Tuff® and Versa-Rugged VR™ are registered tradenames and trademarks of IDEX Corporation

VERSA-MATIC®, IDEX AODD, Inc. A Unit of IDEX Corporation 800 North Main Street, P.O. Box 1568 Mansfield, OH 44901-1568 USA

Tel: (419) 526-7296 Fax: (419) 526-7289 www.versamatic.com



